

NoMIX[®] PATIENT TAKE-HOME INSTRUCTIONS

Temporary Cement



Clean old cement from tooth prep.




Clean old cement from crown.




Open tube and remove foil seal.
Squeeze a small amount inside of crown.



Moisten tooth prep.

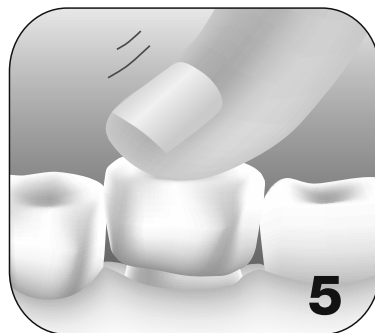

Set crown back into mouth and
close mouth normally.

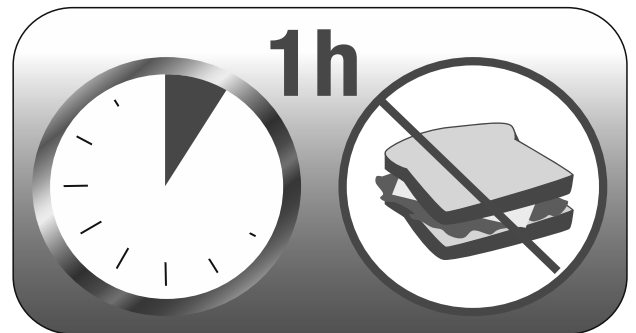

Do not eat for 1 hour.